

APORO®



T26

扩音器
Amplifier

Operation Manual

使用说明书

更多产品请登入

www.aporo.cn

前 言

尊敬的用户：

您好！

欢迎您使用 **APORO**[®] 数码产品！

APORO[®] 数码产品将以高科技的品质和优良的服务进入您的工作和生活，您一旦拥有，就会真切的感受到它的卓越性能和优良品质，让您时刻都能享受生活的轻松愉快。

警告：如果电池使用不当会有爆炸危险，只能用同样类型或等效类型的电池来更换！

注意

本手册描述的产品及其附件的某些特征和功能，仅供参考。

本公司保留随时修改本手册中任何信息的权利，无需进行任何提前且不承担任何责任。

无担保声明

本手册中的内容，除非适用法律要求，本公司对本手册中的所有内容不提供任何明示或暗示的保证，包括但不限于适销售或者使用于某特定目的的保证。

在法律允许的范围内，本公司在任何情况下，都不对因使用本手册相关内容而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿，也不对任何利润、数据、商誉或可预期的损失进行赔偿。

进出口管制

若需将此产品手册中描述的产品出口、再出口、或者进口，您应遵守适用的进出口管制法律法规。

APORO®

产品操控示意图



2.4G无线版麦克风使用说明

1. 打开2.4G无线麦和扩音器主机，无线麦蓝灯停止闪烁，主机不再发出提示音，即自动连接成功，可以开始使用。
(短按麦克风正面的+ - 按键可调节扩音音量)，麦克风音量最大时有最大音量提示音。
2. 主机一直发出等待连接的提示音，请将无线麦靠近扩音器主机,然后把无线麦开关机一次即可。
3. 2.4G无线麦电量不足时，指示灯会快速闪烁，此时也无法连接主机，请及时充电。
无线麦充电时，指示灯亮红色，充满电指示灯熄灭。
4. 无线麦上面的M按键，短按为混响开关，长按为断开当前配对。

*本页介绍仅适用于2.4G无线版机器，并不代表所有机器都有此功能。

TF模式按键操作指南

1. 上一曲：短按上一曲. 长按快退。
2. 下一曲：短按下一曲. 长按快进。
3. 暂停/播放：短按暂停/播放当前播放 TF卡歌曲，（长按单曲/全部循环）
4. 电源键：长按开关机，短按模式切换。
5. 音量旋钮：正时针旋转音量旋钮为音量加，最大有提示音提示最大，逆时针旋转为音量减。

蓝牙模式按键操作指南

1. 上一曲：短按上一曲. 长按无效。
2. 下一曲：短按下一曲. 长按无效。
3. 暂停/播放：短按暂停/播放当前播放蓝牙歌曲，（长按断开当前蓝牙进入等待配对蓝牙名称为：APORO T26）
4. 电源键：长按开关机，短按模式切换。
5. 音量旋钮：正时针旋转音量旋钮为音量加，最大有提示音提示最大，逆时针旋转为音量减。

备注：播放音乐时当连上有线麦和无线麦喊麦会减低音乐音量，这是话筒优先功能。

（通过暂停键暂停音乐）

1. 初次开机使用为默认音量，使用过后为记忆音量。
2. 红色充电指示灯：充电过程中为常亮，充满熄灭。
3. 工作指示蓝灯：音乐工作指示灯工作为慢闪烁，暂停为常亮，蓝牙等待连接快闪烁，连接成功常亮，播放蓝牙音乐慢闪烁，暂停常亮。
4. 低电提示：蓝灯超快速闪烁并伴有警告声提示低电。

The logo for Aporo, featuring the brand name in a bold, white, sans-serif font against a dark, rounded rectangular background.

使用方法

- 1: 将包装内的主机取出，用腰带扣子扣住主机背面两边圆孔，通过腰带把主机系在腰上或挂在肩上，可调节腰带让主机处于腰间适合位置。
- 2: 把头戴麦戴于头上，调节好麦克风位置，最好离嘴前方1-2CM处，把头戴麦克风另一端3.5插头插入主机上方麦克风插孔内；

操作方式

- 1.扩音：长按机器侧面电源按键，听到机器发出开机提示音表示已经开机，此时表示机器可以正常使用，插入本机标配麦克风致“话筒”插口，系统则自动，默认为扩音状态，注意:在任意功能模式下，按下“暂停”键，其他功能将会停止，扩音效果将会更加出色，如果调至最大声音时产生啸叫可把耳麦和机器的距离拉开些，建议咪头与嘴巴的距离为1厘米左右最佳。
- 2.模式切换：在主机连接了手机蓝牙，同时还插入了TF卡时，可以短按侧面的电源按键，来切换工作模式。
- 3.TF播放：按照机身标识的方向将TF卡正确插入TF卡槽后，即可正常播放TF卡中的音频文件
- 4.充电：本机充电规格为5V 1A，USB充电头建议使用5V1A的，最大不要超过5V2A。充电时，主机指示灯红灯常亮，充满熄灭。

The logo for APORO, featuring the brand name in a bold, white, sans-serif font on a black rectangular background.

数据参数

输出功率	20W	频率响应	50Hz-15000Hz
输出阻抗	3Ω	工作温度	-10℃-45℃
充电电压	DC 5V 1A	使用扩音时间	约12小时
使用音乐时间	约8小时	充电时间	4-6小时

注意事项

- 1、为了达到话筒扩音最佳效果，请将咪头放置嘴正前方1CM处对准咪头处发音，若有啸叫，可适当调小音量或将机器与咪头的距离稍微拉开，以防互相干扰；
- 2、尽量避免频繁拔插咪克风插口，以免造成插口松动而引起接触不良，不可将话筒和音源插错
- 3、为保证锂电池使用寿命，建议使用完再充电，频繁充电将加速电池芯片老化，长时间不用时应每隔两个月充一次电
- 4、因喇叭磁性效强，不可将机器和银行卡等带磁性的东西放一起，以免造成失磁而带来不必要的麻烦
- 5、本产品所有配件皆按本机工作需要设计，如需更换配件尽量使用本公司原装配件，以达到最佳工作状态。

※1. 如果电池更换不当会有爆炸危险，只能用同样类型或等效类型的电池来更换

※2. 机器使用环境为-10-45摄氏度，电池（电池包或组合电池）不得暴露在诸如日照、火烤或类似过热环境中

※3. 电池具有污染性，请妥善处理报废电池和机器

常见问题的自我解决

- 1、开关开启，扩音机没有声音

A、屏幕灯不亮，电源没电，充电解决 B、屏幕灯亮，话筒是否插错位置

- 2、扩音器有明显啸叫

A、正确配戴话筒，将咪头记号处对准嘴角方向。

B、空间变小时应适当调低音量以减少混响音量造成啸叫。

产品保修须知

为了让您更好的享受我公司的各项服务，请详细阅读以下内容：本公司产品的保修服务由全国各地的本公司授权技术服务中心负责提供。本产品自销售之日起计保修期和“三包”有效期，在“三包”有效期内。正常状态下使用本产品而发生故障，可依据“三包”规定予以维修、更换、退货。在产品保修期内，可依照本保修条款的内容，在本公司授权技术服务中心享受无偿维修服务，（随机附件：USB线等，不在保修范围内）。本品保修期限规定为一年。

在保修期（含“三包”有效期）内以下情况将实施有偿维修服务，同时不享受“三包”服务

- 1) 不能出示有效保修卡原件和有限发票。
- 2) 购买产品日期、销售单位名称（盖章有效）等项目未能完整填写或涂改保修卡。
- 3) 由于不可抗拒的自然灾害造成的故障、损伤。
- 4) 在运输、搬卸过程中造成的故障、损伤。
- 5) 由于未能按照《产品使用说明书》上所写的使用方法和注意事项操作而造成的人为故障。
- 6) 未经本公司授权对产品进行的拆卸、维修、改装而造成的故障。

需要保修时请将机器与本保修卡（原件）及购机凭证（复印件）一起送往本公司授权技术服务中心，运输费由用户承担。

产品保修卡

购买产品时，请认真填写此卡，并予以妥善保存。

用户档案

用户姓名		性别		年龄	
通讯地址					
联系电话				邮编	
购买地点					
购买日期			销售单号		
品名及规格			机身编号		
经销商签名			用户签名		

[产品标配]

扩音器 1台 腰带 1条 USB电源线 1条

说明书/保修卡 1份 合格证 1份 麦克风 1条

备注：TF卡、U盘、USB充电头均属于选购配件，可根据需要另行购买。





扫码关注官方微信
购买放心服务贴心

官方网址 www.aporo.cn

制造商：深圳市金城伟业电子有限公司 地址：深圳市宝安区福永街道福园一路天瑞工业园A8栋8楼东
电话：0755-29568556 邮箱：help@aporo.cn

本说明书所示产品图片及文字功能已经详细核对，如出现印刷错误，本公司不承担因此产生的后果，产品图片及详细功能参数请以实物为准。

APORO商标及LOGO均已注册，受知识产权保护，未经本公司允许不得仿冒，违者必究。

本公司保留对产品更正改进的权利，届时恕不另行通知，在法律允许范围内，最终解释权归深圳市金城伟业电子有限公司所有。

APORO®



T26

Amplifier

Operation Manual

website

www.aporo.cn

Dear customer,

Welcome to use **APORO** digital products!

APORO digital products will enter your work and life with high-tech quality and excellent service. When you have our products, you will feel exactly that they have overall performance and high quality. They will keep your life easy and comfortable.

Notice: Danger of explosion if battery is not used properly. Can be replaced with the same or equivalent type of battery only!

Notice

The features and functions of the products and their accessories described in this manual are for reference only.

Unsecured statement

Regarding the contents of this manual, except as required by applicable law, APORO company does not provide any express or implied warranties to the contents of this manual, including but not limited to sales or use of a particular purpose.


When allowed by law, APORO company is not liable for any special, incidental, indirect or secondary damages arising from the use of the contents of this manual in any case.

Import and export control

If you want to export, re export, or import the products described in this manual, you should comply with applicable import and export control laws and regulations.

APORO®

Product control schematic

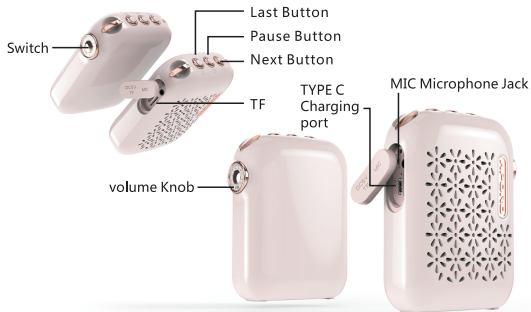

2.4G wireless microphone instruction

1. Turn on the 2.4G wireless microphone and amplifier host, the wireless microphone blue light stops flashing, and the host no longer emits a prompt sound, indicating that the connection is successful and can be started.
(Short press the +- and button on the front of the microphone to adjust the amplification volume), When the microphone volume is at its maximum, there is a maximum volume prompt sound.
 2. The host keeps emitting a beep waiting for connection. Please place the wireless microphone close to the speaker host and turn it on and off once.
 3. When the battery level of the 2.4G wireless microphone is low, the indicator light will quickly flash, and the host cannot be connected at this time. Please charge it in a timely manner. When charging the wireless microphone, the indicator light turns red and the fully charged indicator light turns off
 4. The M button on the wireless microphone. Short press to activate the reverb switch, and long press to disconnect the current pairing.
- * This page only applies to 2.4G wireless version machines and does not mean that all machines have this feature.

TF Mode Key Operation Guide

1. Previous song: Short press the previous song. Long press fast rewind.
2. Next song: Short press one song. Long press fast forward.
3. Pause/Play: Short press pause/play the currently playing TF card song, (long press single/cycle all)
4. Power button: Long press to turn on/off, Short press mode switching.
5. Volume knob: Rotate the volume knob clockwise to increase the volume, with a maximum prompt sound, and counterclockwise to decrease the volume.

Bluetooth mode button operation guide

1. Previous song: Short press the previous song. Long press is invalid.
2. Next song: Short press one song. Long press is invalid.
3. Pause/Play: Short press to pause/play the currently playing Bluetooth song, (long press to disconnect the current Bluetooth and enter the waiting pairing Bluetooth name: APORO T26)
4. Power button: Long press to turn on/off, Short press mode switching.
5. Volume knob: Rotate the volume knob clockwise to increase the volume, with a maximum prompt sound, and counterclockwise to decrease the volume.

Note: When playing music, connecting a wired or wireless microphone will reduce the music volume, which is the priority function of the microphone.

1. The default volume is used for the first boot, and the memory volume is used after use.
2. Red charging indicator light: Normally on during charging, fully charged and off.
3. Work indicator blue light: The music work indicator light works slowly, pauses and remains on. Bluetooth waits for connection to flash quickly, successfully connects and remains on. Playing Bluetooth music slowly flashes, pauses and remains on.
4. Low battery prompt: The blue light flashes rapidly and is accompanied by a warning sound to indicate low battery.

Instruction

1. Take out the amplifier in the package, buckle the hole on the back side of amplifier with the belt, through the belt to the amplifier on the waist or hanging on the shoulder. Length of belt can be adjusted to suit the location of the waist.
2. wear the microphone on the head, adjust the position of microphone, the best distance from mouth is 1-2cm, plug the other end of microphone 3.5 into microphone jack on the amplifier.

Operation

1. Amplification: Press and hold the power button on the side of the machine, and when you hear a startup prompt sound, it indicates that the machine has been turned on. At this time, it indicates that the machine can be used normally. Insert the standard microphone into the "microphone" jack, and the system will automatically and default to the amplification state. Note: In any function mode, press the "pause" button, other functions will stop, and the amplification effect will be even better, If there is a howling sound when the sound is turned to maximum, the distance between the earphone and the machine can be widened. It is recommended that the distance between the microphone and the mouth is about 1 centimeter, which is the best.

2. Mode switching: When the host is connected to a Bluetooth phone and a TF card is also inserted, you can briefly press the power button on the side to switch the working mode.
3. TF playback: After correctly inserting the TF card into the TF card slot according to the direction marked on the body, the audio files in the TF card can be played normally
4. Charging: The charging specification of this device is 5V 1A. It is recommended to use a 5V1A USB charging head, with a maximum of 5V2A. When charging, the red indicator light of the host is constantly on, and it goes out when fully charged.

Data sheet

Output power	20W	Frequency response	50Hz 15000Hz
Output resistance	3Ω	Operation temperature	-10°C-45°C
Charge voltage	DC 5V 1A	Amplifying time	About 12 hours
Music time	About 8 hours	Charging time	4-6 hours

Notice

1. In order to achieve the best amplify result, please put the microphone in front of mouth 1cm when speaking. If the occurrence of shouting, please suitably to adjust the volume small and add distance between microphone and amplifier.
 2. Pls try to avoid multiple plug the microphone, so as to avoid bad contact. Do not mix the microphone and audio when plugging.
 3. In order to ensure the life of lithium battery, it is recommended to charge after using. Frequent charging will accelerate the aging of battery chip. Charge once every two months if you not use a long time.
 4. Due to the strong magnetic horn, the machine can not be put together with the bank card and magnetic things to avoid lose magnetic.
 5. All accessories of this machine are designed according the needs of machine. In order to achieve the best working condition, as far as possible to use original accessories if you need to replace accessories.
- *1. If the battery is not replaced properly, there will be an explosion risk. Can only be replaced with the same or equivalent type of battery.
 - *2. Temperature of machine using should during -10-45°C, battery should not be exposed to sunlight, fire and overheated environment.
 - *3. The battery is contaminated, please deal with scrap battery and machine properly.

FAQ

1. The amplifier is not sound even the switch on.
 - A. If the light of screen is not light and amplifier is without power, charging can solve the problem.
 - B. The light of screen is light, check if the microphone is in wrong position.
2. The occurrence of shouting of amplifier.
 - A. wear the microphone correct, make microphone in front of the mouth direction.
 - B. lower the volume to avoid shouting in small space.

Product warranty notes

In order to let you enjoy our service, please read below details: Warranty service of APORO company is supplied by technical service centers authorized by APORO company around the country. The warranty period is calculated from the date of sale. If failure to use this product under normal condition, you can ask for repair, replace and return of this product. In the warranty period, according to the terms of warranty, the product can enjoy free repair service in technical service centers authorized by APORO company(The attachment is not within the warranty such as USB line). The warranty period is one year. In warranty period, we will provide paid maintenance service for following:

1. Can not provide original valid warranty card and valid invoice.
2. Can not complete items such as the date of purchase, the name of the sales unit(sealed) etc. or altered warranty card.
3. Damaged due to irresistible natural disasters.
4. Damaged due to transportation and unloading.
5. Failure as not according the instruction and notice in the manual.
6. Failure as remove, repair and refit without authorization of the company.

Please send the machine together with original warranty card and copy of purchase certificate to technical service centers authorized by APORO company if need warranty service. Transport costs borne by the user.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Warranty card

Please fill in this card and store it properly when purchase this product.

User profile

User name		Male/Female		Age	
Address					
Contact number				Post code	
Place of purchase					
Date of purchase		Sales number			
Product name and specifications		Serial number			
Dealer signature		User signature			

Amplifier 1 belt 1 USB line 1

Warranty card 1 qualification 1 microphone 1

Notice: TF card, U disk, USB charging head are optional accessories, can be purchased as required.

Commodity: Amplifier

Made In China

Manufacturer: Shenzhen Jin Cheng Wei Ye Electronics CO.,LTD

East 8/F, Block A8, Fu Yuan 1 Road, Tian Rui Industrial Park, Fuyong Community,
Bao'An District, Shenzhen, China

TEL: 0755-29568556

E-Mail: help@aporo.cn

web: www.aporo.cn

Reserve The Right To Change The Product Appearance & Design Without Prior Notice